




TRANSITIONAL

SLEEP SYSTEM
By HSM Bedding Solutions

REMOTE FUNCTIONS	
a.	HEAD - Press Head button and select Pos Up or Pos Down to adjust
b.	TV - Pre-Set TV position
c.	LOUNGE - Head and foot top position
d.	0 GRAVITY - Zero Gravity Pre-Set Position
e.	FLAT - One Touch Flat
f.	FLASHLIGHT - Remote Control Flash Light
g.	UNDERCARRIAGE LIGHTS - Turn LED Lights under the bed Off/On
h.	FOOT - Press Foot button and then select Pos Up or Pos Down to adjust
i.	EMERGENCY POWER DOWN - Push button to cancel all settings and reset bed to flat
+	Speed Up - Massage Speed Up
	MASSAGE POWER - Turn Massage On/Off
-	Speed Down - Massage Speed Down
▲	POS Up - Use with Head or Foot to position bed up
▼	POS Down - Use with Head or Foot to position bed down

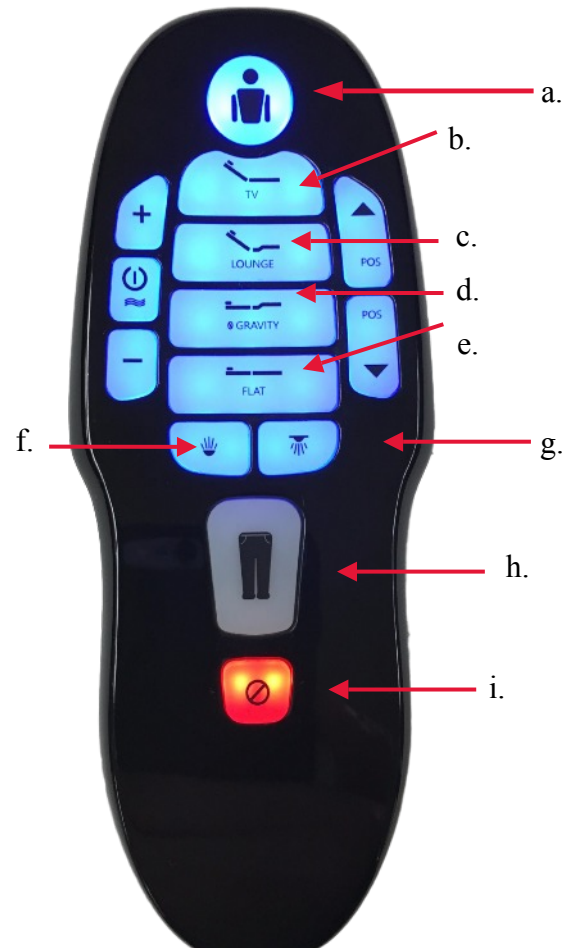

Transitional Adjustable Base - Quick Guide

(For detailed instructions, refer to the owners manual online at www.transitionalsleep.com)

TS800


Your adjustable bed kit contains the following parts:

- (4) Base Legs
- Wireless Remote Control
- Two (2) 9V Batteries
- Two (2) AAA Batteries
- One (1) Hex L-key
- AC Adapter
- Power Cord
- Bluetooth Module
- Mattress Retainer Bar (2) screws and (2) brackets.



Step 1: Open Packaging

- Lay shipping box flat on floor (top up) and open to remove box top. Remove parts box and all loose parts.

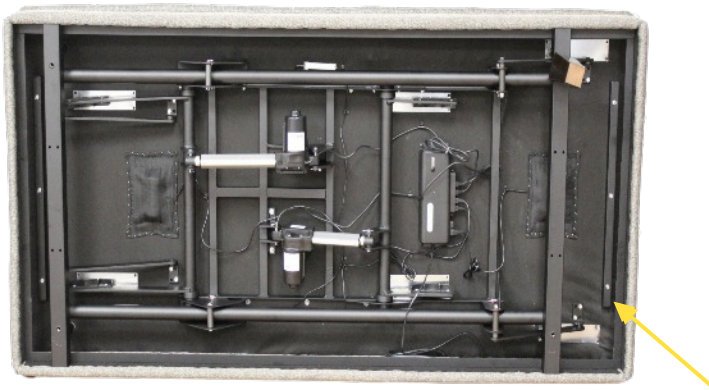

Step 2: Install Legs

- Install one leg to each corner of the base by screwing them into the single hole threaded inserts located on the steel frame. (Do Not over tighten.)




Step 3: Install Batteries and Power Cord

- Locate and open the battery compartment in the AC Adapter. Install two 9V batteries and close compartment.
- Connect AC Adapter cord to Control Box power cord.
- Connect Power Cord to AC Adaptor cord.



Step 4: Sync Wireless Remote to Control Box

Press HEAD UP and FOOT UP at the same time, then press and release RESET button located on Control Box

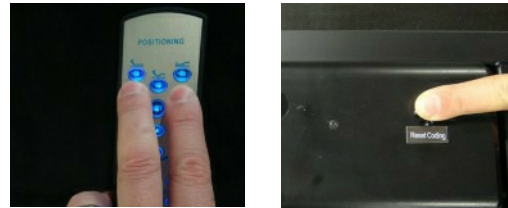

Step 5: Check all Connections at Control Box and LED Lights

- Locate Control Box on underside and confirm that all cables are secured.
- Locate LED Lights and confirm all connections are secure.

Step 6: Connect Bluetooth Module

- Plus Bluetooth Module into slot in Control Box
- Sync Bluetooth Module to Wireless Remote:
Press/hold TV and LOUNGE buttons on remote at the same time
Press/release RESET button front of Bluetooth module.


* Bluetooth app for iPhone and iPad can be downloaded from iTunes under TSS Remote (Apple app for IOS 8.1.2 and newer.)

Step 7: Turn Base to Upright Position

Lift base of out of box by Metal Frame (DO NOT pick up by upholstered panels) and set on legs. **ALWAYS use two or more people to lift base.**

Step 8: Install Mattress Retainer

- Remove screws and capture washers with provided Hex-L Key.
- Install mattress retainer using screws and capture washers.

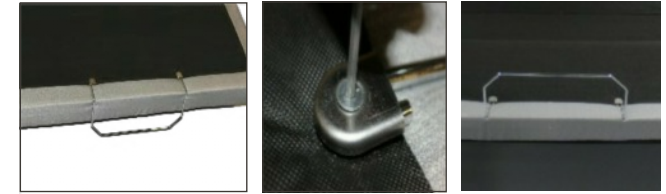

Step 9: Install Trim Boards

-

Step 10: Plug Base to Electrical Supply

- Plug base power cord into surge protector or wall outlet



Step 11: Split Base Sync (if applicable)

- Bases are synced by having them controlled from a common remote. Using the instructions from Step 4, sync the remote to both bases.

For questions or comments regarding your Transitional Sleep System please call us toll free at 844.433.2435 or visit us online at www.transitionalsleep.com


TRANSITIONAL
SLEEP SYSTEM
By HSM Bedding Solutions