


	REMOTE FUNCTIONS
a.	POS 1 - TV Mode (Head side to top position, foot side flat position.
b.	POS 2 - Zero Gravity (Foot side top position, Head side flat position
c.	POS 3 - Lounge - Head and foot top position
d.	HEAD - Head Up & Head Down
e.	FOOT - Foot Up & Foot Down
f.	SET - Use with P to program a favorite position
g.	FLAT - One Touch Flat
h.	P - Use with Set to program favorite position
i.	Intensity Up & Down - Massage Intensity
j.	Speed Up & Down - Massage Speed
k.	On/Off - Head Massage
l.	On/Off - Foot Massage
m.	1 - Use with Set to program favorite position
n.	2 - Use with Set to program favorite position
o.	3 - Use with Set to program favorite position
p.	Flashlight - Off & On
q.	Undercarriage Lights - Off & On



TRANSITIONAL

SLEEP SYSTEM
By HSM Bedding Solutions

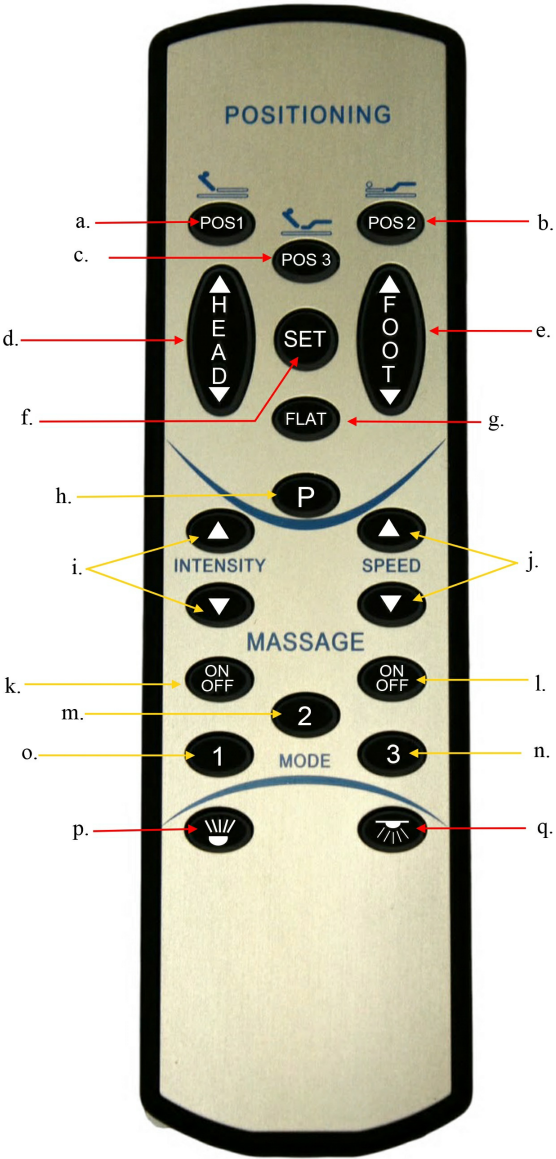

Transitional Adjustable Base - Quick Guide

(For detailed instructions, refer to the owners manual online at www.transitionalsleep.com)

TS 100 - TS 200


Your adjustable bed kit contains the following parts:

- a. (4) Base Legs
- b. Remote Control (batteries included with wireless)
- c. Mattress Retainer Bar (2) screws and (2) brackets.
- d. Power Cord (for Battery Power Box - TS 200 Only)
- e. Battery Backup Pack (battery included - TS 200 Only)



Step 1: Remove Box from Packaging and Install Legs

- a. Lay shipping box flat on floor (top up) and open to remove box top. Remove parts box and all loose parts.

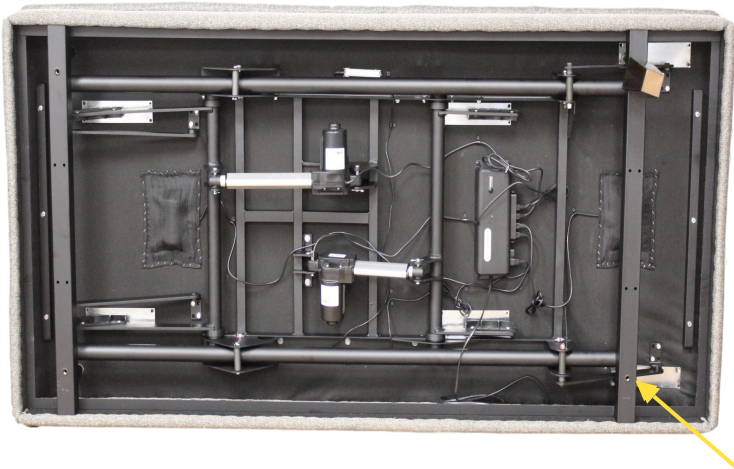

Step 2: Install Legs

- b. Install one leg to each corner of the base by screwing them into the single hole threaded inserts located on the steel frame.




Step 3: Install Batteries and Power Cord

- a. Locate and open the battery compartment in the AC Adapter. Install two 9V batteries and close compartment.
- b. Connect AC Adapter cord to Control Box power cord.



Step 4: Check all Connections at Control Box and LED Lights

- a. Locate Control Box on underside and confirm that all cables are secured.
- b. Locate LED Lights and confirm all connections are secure.

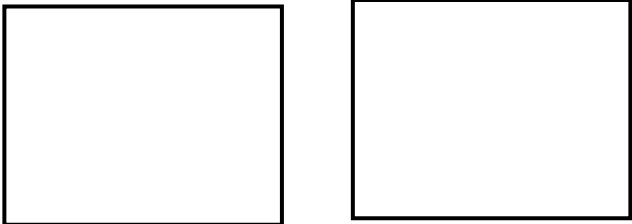

Step 5: Sync Wireless Remote to Control Box

Press HEAD UP and FOOT UP at the same time, then press and release RESET button located on Control Box



Step 6: Turn Base to Upright Position

Lift base of out of box by Metal Frame (DO NOT pick up by upholstered panels) and set on legs. ****ALWAYS use two or more people to lift base.****

Step 7: Install Mattress Retainer

- a. Remove screws and capture washers with provided Hex-L Key.
- b. Install mattress retainer using screws and capture washers.




Step 8: Install Trim Boards

- a.

Step 9: Powering the Base

Plug base power cord into surge protector or wall outlet

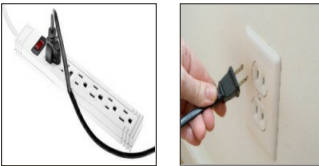

Step 10: Split Base Sync (if applicable)

- a. Bases are synced by having them controlled from a common remote. Using the instructions from Step 4, sync the remote to both bases.

For questions or comments regarding your Transitional Sleep System please call us toll free at 844.433.2435 or visit us online at www.transitionalsleep.com

